

'ROTOFLEX' REAR HUB SHIMS - FITTING INSTRUCTIONS

When changing the drive shafts you do not have to change the shimming if you do not disturb the bearings. Just use the existing shims on the new driveshafts.

If the hub bearings do need changing be careful it is not a simple job and they will need to be re shimmed.

To be honest it is better left to a specialist.

It can be done by a competent DIY mechanic if you have an old drive flange with the bearing diameters reduced by 2 thou and the end ID expanded by 6 thou so it will slide in the bearing ID and slip over the inner drive shaft.

If this is the case and you have one then follow the procedures in a good workshop manual.